

OWNER'S MANUAL
ASSEMBLY MANUAL
MONITOR INSTRUCTIONS
WARRANTY & CONTACT INFO

TABLE OF CONTENTS

Owner's Manual	03 – 10
Assembly Instructions	11 – 17
Monitor Instructions	19 – 32
Troubleshooting / Warranty Information	33 – 35

INTRODUCTION

Congratulations on becoming a WaterRower owner.

Rowing is universally recognized as the perfect aerobic exercise – smooth, low impact, rhythmic and whole-body – unrivalled for its physiological benefits and aesthetic pleasures.

“Rowing, indoors or outdoors, at any exercise level of intensity, requires a greater exercise expenditure than any other aerobic activity. Calories are burned in relation to the number of muscles used and the intensity and duration of the exercise. Rowing with a sliding seat uses a very large muscle mass since the upper, lower and trunk muscles are used vigorously.”

-Dr. C Everett Koop- Former US Surgeon General

While most rowing machines imitate the action of rowing, they do so mechanically, and therefore lack the natural dynamics experienced when a boat and crew glide down a river.

At WaterRower, we have focused on replicating the physical dynamics of rowing, with the knowledge that this will achieve all of its physiological benefits, as well as much of the aesthetic pleasure.

To maximize the enjoyment from using your WaterRower we recommend that you follow our suggestions on rowing technique and training programs. We hope that some of the discussion points in this manual will improve your knowledge about exercise in general, so that you are better able to fulfill your specific exercise objectives.

Your WaterRower has been carefully hand-crafted to give you years of trouble-free use. You will notice that each WaterRower is unique due to the variance in color and grain that occurs naturally in genuine hardwood. We recommend that you closely follow the assembly details provided, particularly by assembling the machine in the correct sequence, and adhering to the suggested maintenance schedule.

We hope you enjoy using your WaterRower for many years to come!

SAFETY

We recommend consulting a physician before starting out with an exercise program.

Please read all instructions before using the WaterRower. Additional information on getting started, rowing technique and rowing training advice can be found at www.HowToRow.com.

⚠ Warning: Please keep hands away from moving parts when rowing machine is in use.

For further information on safety tips, please refer to www.waterrower.com/safety.

OPERATION

The WaterRower is unique in using the effect of drag to provide an exercise which is entirely self paced. Because drag is linked to speed, a crew rowing down a river chooses its intensity of exercise simply by altering the pace at which they row: the faster the boat travels the greater the drag and the harder the crew must work. There is a similar effect in swimming.

By replicating these dynamics the WaterRower does not require adjustment to increase resistance: if a more intensive workout is required, simply row faster and harder, and the WaterRower will respond accordingly.

WATER LEVEL

The amount of water in the Tank simulates the weight of the Boat and Crew as it glides down the river. Changing the Water Level does not change the resistance, it simply changes the mass which the user is trying to move. Increasing the Water Level simulates a heavier boat and crew mass, similarly reducing the Water Level simulates a lighter boat and crew mass.


The Water Level is adjusted according to one's personal preference or user type; the intensity is altered simply by moving the chosen mass faster or slower. A level gauge is positioned on the side of the the tank. Overfilling the tank could impact the warranty coverage. Do not fill above the maximum level.

NOTE - Fill the tank with ordinary municipal water. Municipal water contains additives which will deter the growth of algae. If municipal

water is unavailable, use distilled water. Unless using blue dye, add the purification tablet supplied with your WaterRower. (Refer to the section on Preventative Maintenance for advice on Water Treatment).

FOOTPAD POSITION

The footpad has been designed to be adjusted for maximum comfort. The foot strap is designed to cross the foot at the pivot point of the toes (the ball of the foot). This should enable the heel to be raised off the footboard as the user comes forward with each stroke. The footpad can be easily adjusted to accommodate different foot positions. The standard footboard model requires pressing the Button between the Foot Straps to move the footpad up or down.

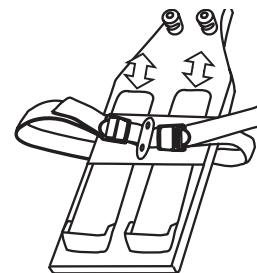

Note:
Do not tighten any of the footboard assembly bolts.

MAINTENANCE

START UP MAINTENANCE

During the first weeks of use, the wood in your WaterRower will adjust to the temperature and humidity of the environment. During this period it is strongly advised that you GENTLY tighten all the connecting bolts with the Allen key stored under the rear spacer. Please be careful not to overtighten any of these bolts.

Additionally, as the drive and recoil belts loosen up with use, it may be necessary to tighten the bungee cord. To do this, leave the handle in the full forward position and adjust the bungee/recoil belt buckle to provide a little more tension. It may be necessary to tighten to perform these two simple start up procedures once or twice over the first month of use. Please refer to Adjusting the Recoil video at: www.waterrowerservice.com/videos.

PREVENTATIVE MAINTENANCE

Periodic maintenance is required to maintain the condition of the water in the tank. We strongly ADVISE USING MUNICIPAL TAP WATER which contains treatments to keep it free from bacteria and algae, etc. The water must be refreshed periodically by adding a water purification tablet provided. The purification tablet degrades by exposure to light: this

may vary from 6 months in direct sunlight to 2 years in an artificially lit environment. Generally we suggest adding one purification tablet every six months.

If water discoloration occurs, add a purification tablet immediately. If the water does not clear, we recommend emptying the tank, flushing it out with clean water, refilling and adding a purification tablet. **NEVER USE POOL CHLORINE OR CHLORINE BLEACH** in the tank as this will irreparably damage the polycarbonate tank. The use of an alternative purification option in the tank beyond the approved WaterRower product could void the warranty.

MAINTAINING AND CLEANING

To maintain the appearance and integrity of your WaterRower it is necessary to keep the machine clean. It is particularly important to ensure that there is no dust build up in the clutch and belt mechanism between the top and bottom decks. Dust can be removed by using a cloth or vacuum cleaner.

The surface of the rails must be kept clean to prevent dust and dirt from deteriorating the seat wheels; the rails can be cleaned by wiping with a damp cloth.

The surface of the tank can be cleaned, however, please ensure you read the instructions for any cleaning fluids prior to use. **DO NOT USE METHYLATED SPIRITS, CHLORATES, BLEACH OR AMMONIA BASED FLUIDS WHEN CLEANING ANY PART OF YOUR WATERROWER.** The use of improper cleaning products could void the warranty.

MAINTAINING THE WOOD

The natural wood WaterRowers are finished with Danish oil which gives a deep penetrating finish to the hardwood frame. Other than occasional dusting or polishing, the wood requires no maintenance. If you are the owner of an Oxbridge WaterRower, you will notice that Cherry wood is photosensitive and will develop a wonderful dark patina color over time. The use and/or storage of the WaterRower in inclement weather, including but not limited, to extreme temperatures and moisture could void the warranty.


STORAGE OF YOUR WATERROWER

Your WaterRower can be stored upright. Lift the rear spacer end, pull the WaterRower towards you and use the momentum to stand it in an upright position. When storing the WaterRower, please ensure the seat is in the forward position (close to the footboard). When stored upright the WaterRower is stable and it only takes the space of a chair.

USING YOUR WATERROWER


The Rowing Action uses 84% of your muscle mass; from the tips of the fingers holding the handle/oars, to the balls of the feet connected to the footboard/boat. all the muscles between these 2 points contribute to the Rowing Action.

The Rowing Action is comprised of both fast (drive phase) and slow (recovery phase) movements. It is important to combine these 2 movements into a rhythm in order to create a smooth, flowing, unhurried Rowing Action. The diagrams below show 3 basic movements of the rowing action.

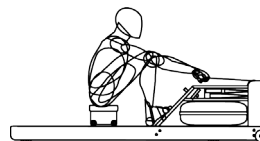


CATCH POSITION

Sitting tall, arms straight reaching forward, shoulders relaxed, head up, eyes looking forward, legs compressed and shins vertical.

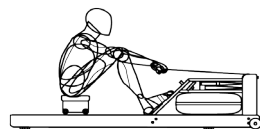

DRIVE PHASE

Drive back with the legs, arms hang off the handle and only begin to bend once handle is above the knees, torso is strong with good posture and body angle opens up slowly as you drive the legs.

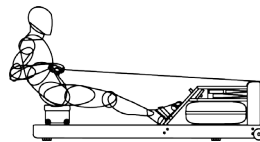

RELEASE POSITION

Legs straight, handle drawn to chest, sitting back just past the vertical, torso firm, shoulders relaxed, head up and eyes looking forward.

Allow yourself the first few rowing sessions to practice the correct positions and phases as well as the correct ratio and rhythm of the rowing action. With regular rowing, the technique will become easier and you will soon experience the physiological benefits of rowing.

Please visit www.HowToRow.com to learn more about the phases and positions of the rowing technique.

WATERCOACH

WaterCoach is a rowing education program designed to broaden the knowledge of rowing as a fitness pursuit. WaterCoach consists of three programs for the WaterRower owner, fitness professional/instructor and the general rowing machine user in the gym;

- WaterCoach Home - a rowing education program and personal training advice for the WaterRower owner.
- WaterCoach Professional - a rowing education program for the fitness professional/ instructor. ACE certified course.
- HowToRow - a rowing education program for the rowing machine user, at a gym.

We hope that this expanded knowledge enables you to realize the unrivalled physical benefits of rowing and get the best from your WaterRower. For more information, please visit www.HowToRow.com.

YOUR EXERCISE PROGRAM

Most of us recognize the benefit of exercise and the potential improvements to our general health and well-being. However, few of us fully understand the physiology of exercise and the best means of achieving our specific exercise objectives.

In order to get the most out of any exercise program, it is essential to have an understanding of what your exercise objectives are. These may include reducing or maintaining weight, improving general strength, developing bulging muscles, improving sporting competitiveness or simply avoiding the health consequences of a modern sedentary lifestyle.

It is important to set a few different types of objectives.

These are divided into:

- Immediate Objectives - weekly
- Short Term Objectives - monthly
- Long Term Objectives - yearly

Your long term objectives are your final objectives, to achieve these, you need stepping stones which are the short term objectives and immediate objectives. Objectives need to be:

- Specific - set goals that you would like to achieve by certain dates
- Realistic - do not set a standard too high or motivation will be lost
- Flexible - be prepared for set backs such as injuries and illness

WEIGHT MAINTENANCE

At lower intensities, our body uses a mixture of fat and carbohydrate as its source of fuel. As the maximum aerobic output is approached, the percentage of fat consumed as fuel reduces to zero. Also, as the duration of exercise is increased, the percentage of fat consumed tends to increase.

If your objective is weight maintenance, then the energy (food) you consume must equal energy used (exercise, metabolism etc.). Exercising for weight maintenance is best achieved at lower intensities and over longer durations. A low intensity (60 - 70% of the maximum heart rate) is typically that at which you can hold a conversation; it is by no means strenuous and is about that achieved by a brisk walk.

AEROBIC TRAINING

A sustained exercise program will improve the efficiency with which the respiratory and cardiovascular system can supply oxygen. This improves lung function, heart function, vascular efficiency and capillary growth, leading to improved well-being and endurance. At about 70 - 80% of the maximum heart rate, lactic acid begins to accumulate in the blood supply at a greater rate than it can be extracted by the liver, kidneys and other organs. Exercising above this intensity will cause progressive accumulation of lactic acid in the blood, increased heart and breathing rates and cause muscle fatigue.

Prolonged exercise at or below this intensity will maintain lactic acid at non-fatiguing levels and exercise duration will be limited solely to the depletion of available fuel stores. If your exercise objective is aerobic training (cardiovascular/endurance), then it is necessary to exercise at an intensity which will avoid fatigue due to lactic acid build up. This is best achieved at moderate levels of intensity over medium/long durations.

A moderate exercise intensity (70-80% of the maximum heart rate) is about that achieved by a steady jog, avoiding the onset of muscle soreness.

ANAEROBIC TRAINING

Anaerobic training causes the build-up of lactic acid (as rapidly as one minute after exercise is commenced). Lactic acid saturation will necessitate either a rapid reduction in exercise intensity or complete cessation.

The accumulation of lactic acid limits the contribution of the anaerobic process to total energy production. Though energy may be generated rapidly, total work capacity and total output is limited.

The level of intensity at which lactic acid begins to accumulate can be altered by training. This is best done by improving the efficiency of the aerobic process and is achieved by training at moderate levels of intensity.

Exercising at anaerobic intensities may condition an athlete's tolerance to fatigue, but the benefit can be more psychological than physiological. Prolonged exercise at high intensity not only impairs the weight reduction and aerobic training effect, but the rapid onset of fatigue can cause poor technique and increase risk of injury.

Training anaerobically is done at high intensities (80-100% of the maximum heart rate) over a short period of time (10 seconds to a few minutes). Interval training is a form of anaerobic training.

TRAINING GUIDELINES

To ensure you get the maximum benefit from training on your WaterRower and to avoid unnecessary problems or injuries here are a few guidelines:

- A health check before starting an exercise program.
- Use heart rate to monitor your intensity.
- Always warm up and cool down.
- Always stretch, especially at the end of your workout.
- Keep a record of your workouts.
- Keep well hydrated.
- Gradually increase the intensity, duration and frequency of your workouts.
- Ensure you include recovery time in your training program.
- Add variety to your workouts. (refer to HowToRow.com/workouts)

TRAINING RESOURCES

For further information on your exercise objectives and rowing training types please visit www.HowToRow.com.


WaterRower ASSEMBLY MANUAL

We have done our best to keep the assembly instructions as clear and concise as possible. Assembling your WaterRower takes about 30-45 minutes and the only tool you need is a 5mm Allen Key that is included on the rear spacer or in the assembly bag. The WaterRower comes partially assembled in two boxes.


PLEASE READ INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY

COMPONENTS

Main Parts

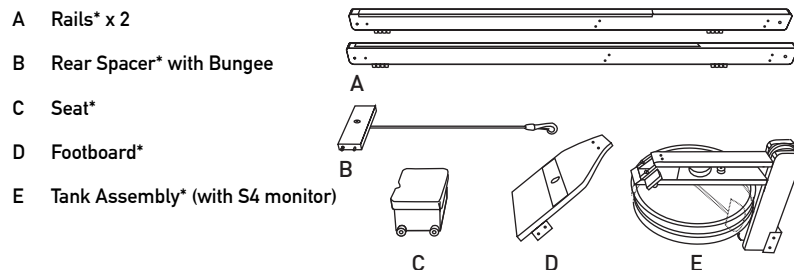


Other Parts

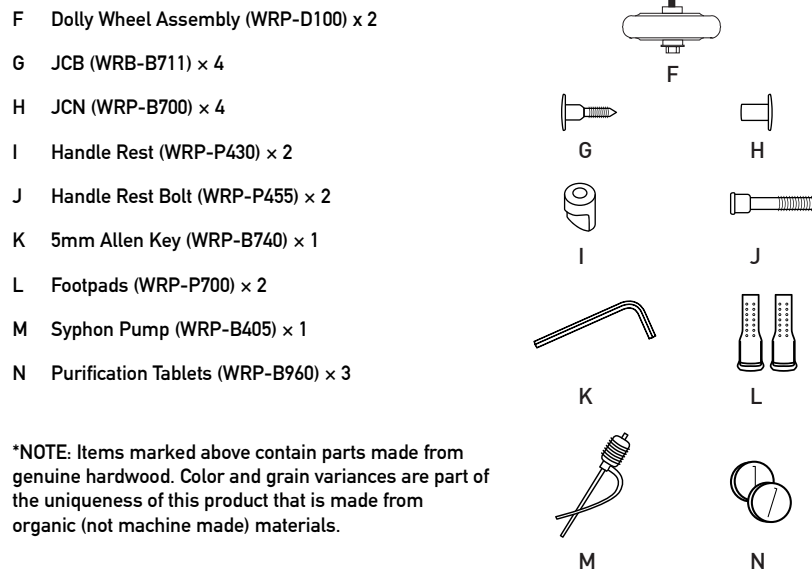

*NOTE: Items marked above contain parts made from genuine hardwood. Color and grain variances are part of the uniqueness of this product that is made from organic (not machine made) materials.


STEP 1

Lay the rails on the floor and connect the rear spacer using the female JCN nuts and the Allen key provided.

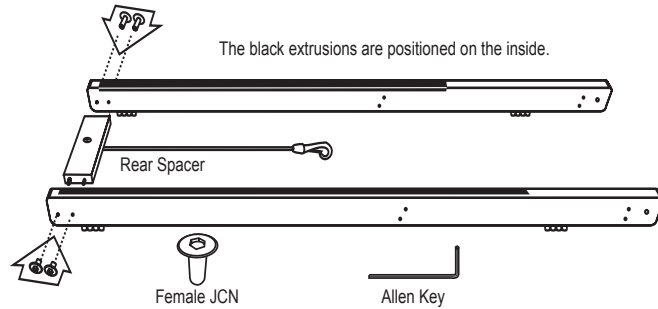


STEP 2

Place the seat assembly between the rails with the indent facing towards the rear spacer. The larger vertically mounted wheels (the load wheels) should sit on the plastic extrusions on the top of the rail. The smaller horizontal wheels below the seat (the guide wheels) should sit between the rails. It may be necessary to separate the rails slightly to allow the guide wheels to fit down between the rails.

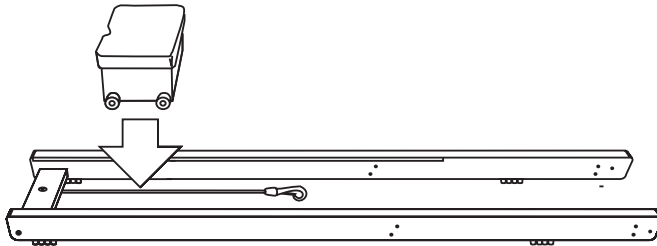


STEP 3

Place the tank assembly between the rails.

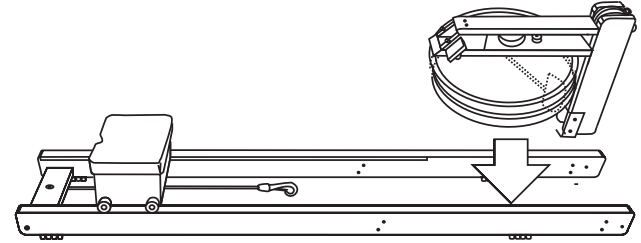


STEP 4

Insert the JCN Nuts and JCB Bolts attaching the tank to the rails at locations A & B. The nuts should be placed on the inside and the bolts on the outside.

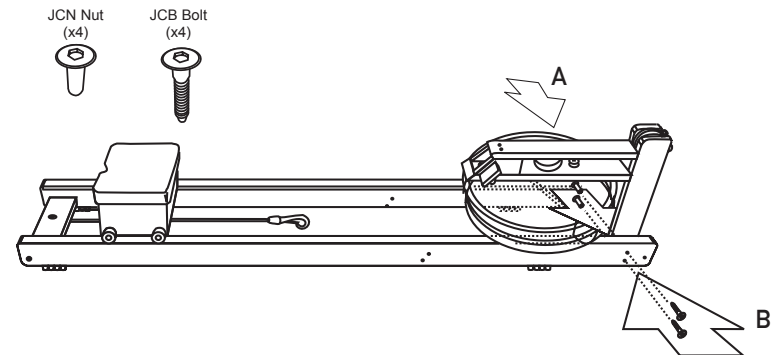


STEP 5

Place the footboard between the rails positioning the top two holes over the two threaded holes in the tank unit. It may be necessary to slightly loosen the two bolts on the Top Deck (B) to allow the footboard clearance. Insert the JCN Nuts and JCB Bolts attaching the Footboard to the Rails at A. Screw the Handle Rests into position using the Handle Rest Bolts (C); do not over tighten. *Should you experience any problem with aligning the components, loosen all the fasteners, align and re-tighten.

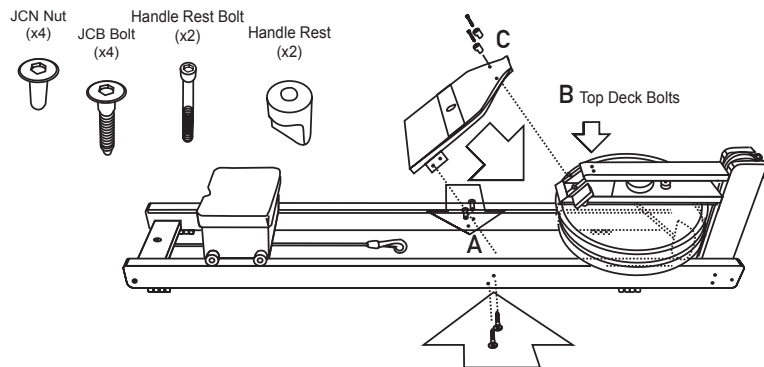


STEP 6

Press the heelrest adjustment button (A) and insert the heelrest/footpads under the footboard cover plate (B). Release the button to 'lock' the heelrests into place. You can adjust the height of the heelrests according to your foot size (refer to page 5 of the Owner's Manual).

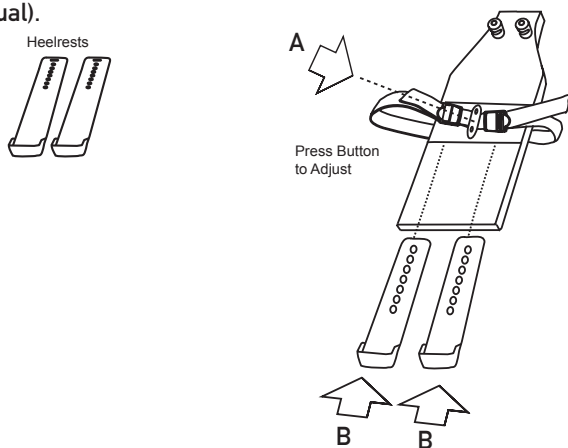


STEP 7

Undo the Dolley Wheel Assembly and fix to the rail in the order shown and tighten. Note - the wheel goes on the outside of the Rail.

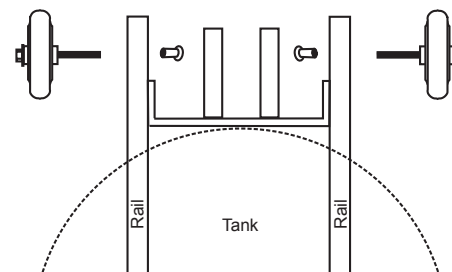


STEP 8

Stand the WaterRower upright. Release the recoil belt which is wrapped around the bracket at the base of the machine. Ensure that the recoil belt is passing over all guide pulleys. Connect the bungee to the recoil strap by hooking the bungee hook through the recoil belt D-ring.

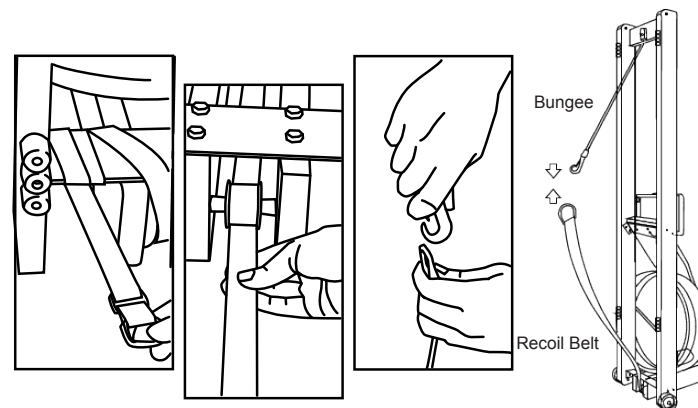

STEP 09

Before filling the tank and rowing, ensure that the recoil belt passes smoothly over all pulleys.

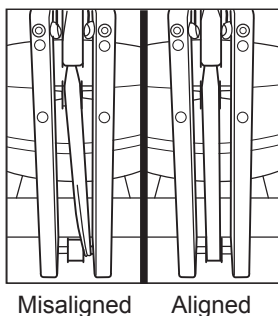


STEP 10

Lay the unit flat and remove the tank stopper from between the top and bottom deck. Use the included syphon pump (or a hose if available) to fill the tank to the desired level with municipal water.

Insert one purification tablet (provided) now and every six months. Additional purification tablets are available upon request at: www.waterrowerservice.com/puritabs


Once completed, insert the Tank Stopper; it may be necessary to moisten the Stopper to assist with replacement.

► Please wipe excess water from wooden components after filling

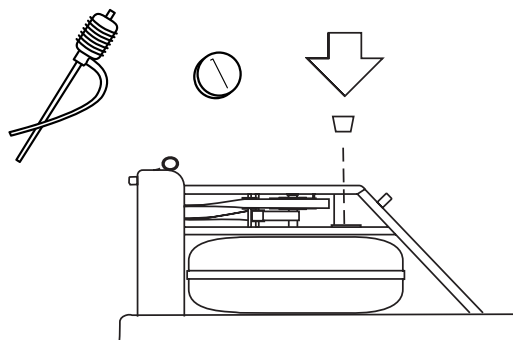


HOW TO FILL AND EMPTY THE TANK

- 1) To pump water, turn the knob clockwise to close valve as shown in figure A
- 2) Locate water source above (higher than) water destination:
 - See Figure B for filling tank
 - See Figure C for emptying tank
- 3) Squeeze pump 4-5 times until water flows
- 4) Turn knob counter-clockwise to allow air into the pump and end syphon.

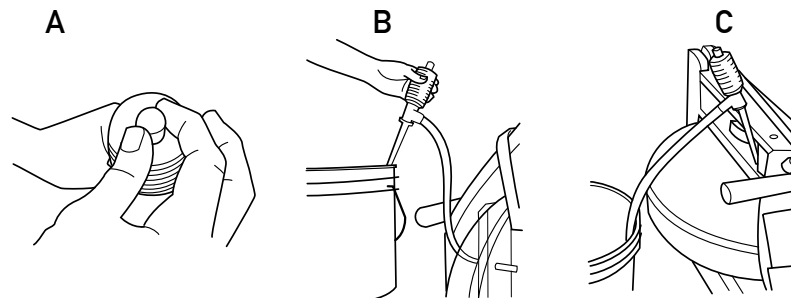


WATER LEVEL

The Level Gauge is positioned on the side of the tank. Information on the sticker includes WaterRower contact information and the Water Level Gauge. The maximum level to fill the tank is Level 19. **DO NOT** fill above the maximum level - this could void the warranty. The standard Calibration Level is Level 17.

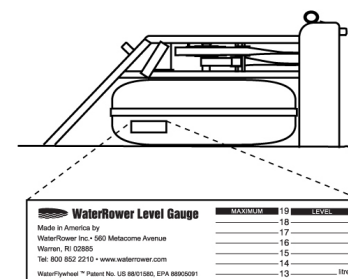


1. Monitor flashing zeros

Solution 1: Try raising the sensor disk (located on top of the clutch). During shipment, the disk may have shifted.

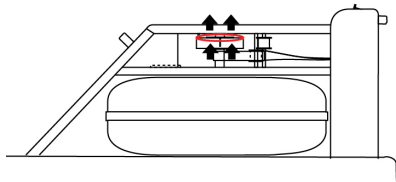

Solution 2: Loosen and retighten the bolts on the upper deck and forward riser. If these bolts are not uniformly tightened during assembly, the alignment may be off.

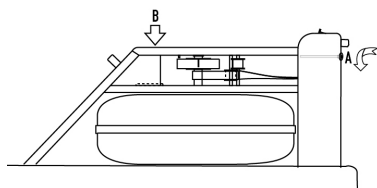

2. **Loosening bolts** - over time and with use bolts can come loose. Use the 5mm Allen key to gently tighten the bolts. If the bolts continue to loosen use a small amount of medium strength Loctite® to fasten the nuts and bolts more securely.
3. **Monitor not turning on** - check the batteries positioned behind the monitor. Unscrew the monitor and gently lift to access the battery pack.
4. **Monitor not counting down** - check the monitor and sensor connector is connected. Check all wiring is intact.
5. **Paddle not turning smoothly** - Loosen all tank bolts and retighten. See instructions at: http://www.waterrowerservice.com/pdfs/troubleshooting_all_rubbing_tank.pdf

For other troubleshooting and service tips, please visit:
www.waterrowerservice.com
 or contact WaterRower at support@waterrower.com


INTRODUCTION

The WaterRower S4 Performance Monitor has been designed to balance a high level of technical sophistication with user friendliness.

The WaterRower S4 Monitor consists of six Information and Programming Windows, six QuickSelect Buttons and three Navigation Buttons.

The WaterRower S4 Display Windows include:

- **INTENSITY** - Shows the intensity of exercise in various units
- **STROKERATE** - Shows the number of strokes per minute
- **HEARTRATE** - Shows the number of heart beats per minute (optional)
- **ZONE BAR** - Shows position relative to a predefined work zone
- **DURATION** - Shows the duration of exercise in time
- **DISTANCE** - Shows the distance covered in various units

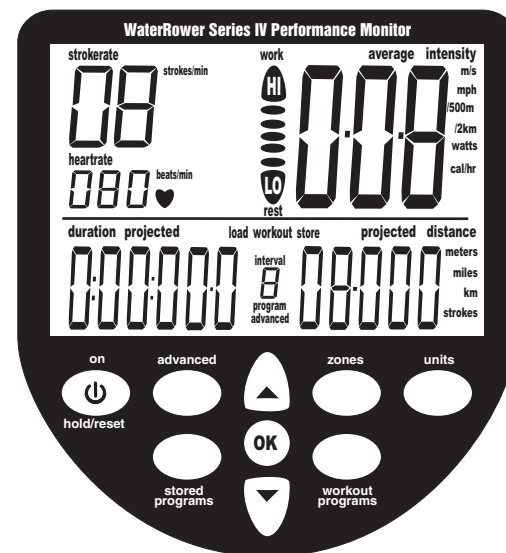


STARTING INFORMATION

Please press the ON button to start up the monitor; the units will flash ready to count down as you begin rowing.


Please note: the Series 4 monitor will turn off automatically after about 2 minutes of no use.

INFORMATION WINDOWS

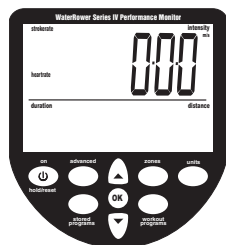


INTENSITY WINDOW

The intensity window of the WaterRower S4 Monitor displays speed (or average speed) in units of m/s (meters per second), mph (miles per hour), /500m (minutes per 500 meters), /2km (minutes per 2 kilometers). It also displays power in watts, and energy consumption in cal/hr (calories burnt per hour). Units may be changed (see setting units later in this manual). Zones may be set for intensity zone workouts (see setting zones later in this manual).

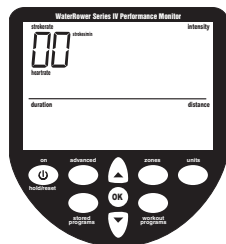


STROKERATE WINDOW

The strokerate window of the WaterRower S4 monitor displays strokerate in units of strokes/min (strokes per minute). Zones may be set for strokerate zone workouts (see setting zones later in this manual).

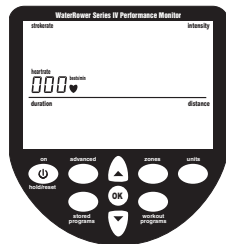


HEARTRATE WINDOW

The heartrate window displays the heart rate (available when the optional heartrate feature is operational) in units of beats/min (beats per minute). Zones may be set for heartrate zone workouts (see setting zones later in this manual).

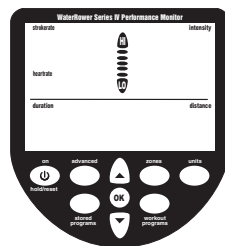


ZONE BAR WINDOW

The zone bar window displays the position below, within and above the programmed zone settings. Zones may be set for intensity, strokerate and heartrate (see setting zones later in this manual).

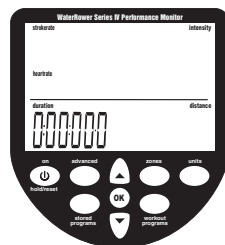


DURATION WINDOW

The duration window displays the time covered (or time to be covered in a duration workout) in units of hours, minutes, seconds and decimal seconds. The duration window may also be programmed to display time remaining (see setting workouts-duration workouts later in this manual).

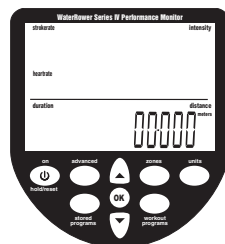

DISTANCE WINDOW

The distance window displays the distance covered (or distance to be covered in a distance workout). Units may be set to meters, miles, km (kilometers) or strokes (see setting units later in this manual). The distance window may also be programmed to display distance remaining (see setting workouts-distance workouts later in this manual).

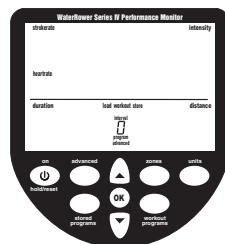


PROGRAM WINDOW

The program window helps the user navigate through a series of advanced functions. Advanced functions include: manual workout program storage and retrieval, projected duration for distance workouts, projected distance for duration workouts, advanced heartrate analysis, power/recovery ratio, 2km prognostics, tank volume, total distance rowed and firmware version (see setting advanced functions later in this manual).


SETTING UNITS

Display Units may be changed using the UNITS button. Units are scrolled in the sequence: intensity - average intensity - distance - intensity- etc.

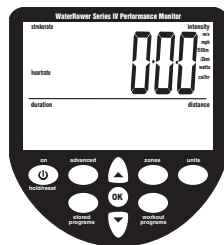


INTENSITY UNITS

- Scroll to the intensity window using the UNITS button (the intensity unit digits will appear along with the intensity and intensity units flag).
- Scroll to the desired intensity unit (m/s, mph, /500m, /2km, watts or cal/hr) using the ARROW buttons. Once the desired unit is highlighted press OK and the monitor will return to ready mode.

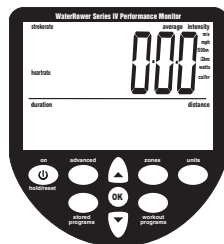

AVERAGE INTENSITY UNITS

- Scroll to the average intensity window using the UNITS button (the intensity unit digits will appear along with the average intensity and intensity units flags).
- Scroll to the desired intensity unit (m/s, mph, /500m or /2km) using the ARROW buttons. Once the desired unit is highlighted press OK and the monitor will return to ready mode.

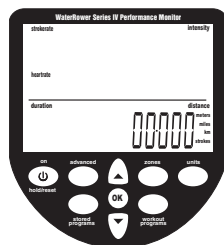

DISTANCE UNITS

- Scroll to the distance window using the UNITS button (the distance unit digits will appear along with the distance and distance units flag).
- Scroll to the desired distance unit (meters, miles, km or strokes) using the ARROW buttons. Once the desired unit is highlighted press OK and the monitor will return to ready mode.


SETTING ZONES

Zones settings allows the user to set upper (hi) and lower (lo) limits for heartrate, intensity and stroke rate.

When the set zone lo limit is breached the zone bar lo flag will flash and a low frequency tone will emit.


When the set zone hi limit is breached the zone bar hi flag will flash and a high frequency tone will emit.




When operating between the upper and lower zone limits, the position in this range will be displayed by the divisional zone bars.

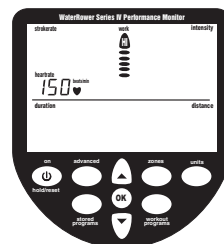

HEARTRATE ZONE SETTING

- Scroll to the heartrate window using the ZONES button (the upper heartrate unit digits will appear along with the heartrate flag and the zone bar will flash scrolling up to hi).
- Scroll to the desired heartrate upper limit using the ARROW buttons.
- Once the desired upper limit is reached, press OK (the lower heartrate unit digits will appear along with the heartrate flag and the zone bar will flash scrolling down to lo).
- Scroll to the desired lower limit using the ARROW buttons.
- Once the desired lower limit is reached press OK and the monitor will return to ready mode.

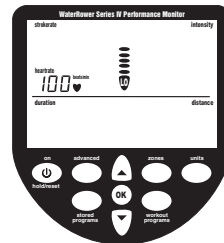

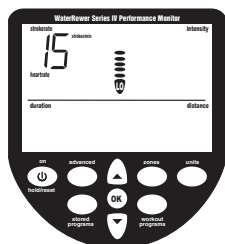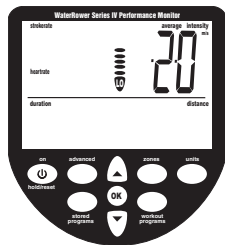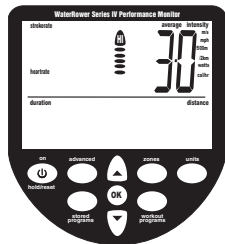


INTENSITY ZONE SETTING

- Scroll to the intensity window using the ZONES Button (the upper intensity unit digits will appear along with the intensity flag and the zone bar will flash scrolling up to hi).
- Scroll to the desired intensity upper limit using the ARROW buttons.
- Once the desired upper limit is reached press OK (the lower intensity unit digits will appear along with the intensity flag and the zone bar will flash scrolling down to lo).
- Scroll to the desired intensity lower limit using the ARROW buttons.
- Once the desired lower limit is reached, press OK and the monitor will return to ready mode.

STROKERATE ZONE SETTING


- Scroll to the stokerate window using the ZONES button (the upper stokerate unit digits will appear along with the stokerate flag and the zone bar will flash scrolling up to hi).
- Scroll to the desired stokerate upper limit using the ARROW buttons.
- Once the desired upper limit is reached, press OK (the lower stokerate unit digits will appear along with the stokerate flag and the zone bar will flash scrolling down to lo).
- Scroll to the desired intensity lower limit using the ARROW buttons.
- Once the desired lower limit is reached press OK and the monitor will return to ready mode.

DISTANCE WORKOUT SETTING

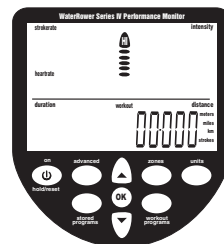


- Scroll to the distance window using the WORKOUT PROGRAMS button (the distance digits will appear along with the distance and distance units flags, the workout flag will be flashing and the zone bar will be scrolling up to hi).
- Scroll to the desired workout distance using the ARROW buttons.
- Once the desired workout distance is reached press OK and the monitor will return to ready mode.
- The S4 Monitor's auto preview feature will automatically scroll through the distance workout settings.

DURATION WORKOUT SETTING

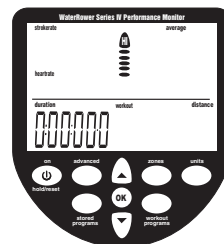


- Scroll to the duration window using the WORKOUT PROGRAMS button (the duration digits will appear along with the duration flag, the workout flag will be flashing and the zone bar will be scrolling up to hi).
- Scroll to the desired workout duration using the ARROW buttons.
- Once the desired workout duration is reached press OK and the monitor will return to ready mode. The S4 Monitor's autopreview feature will automatically scroll through the distance workout settings.


DISTANCE INTERVAL WORKOUT SETTING

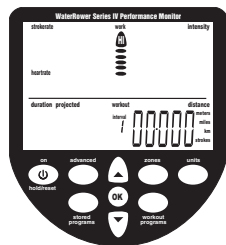


- Scroll to the distance interval workout window using the workout PROGRAMS button (the distance digits will appear along with the distance and distance units flags, the workout, interval and work flags will be flashing and the zone bar will be scrolling up to hi. The number 1 will appear in the program window denominating the first work session). Scroll to the first workout distance using the ARROW buttons.

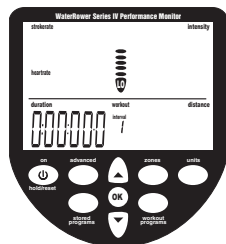

- Once the desired workout distance is reached press OK (the duration digits will appear along with the duration flag, the workout, interval and rest flags will be flashing and the zone bar will be scrolling down to lo. The number 1 will appear in the program window denominating the first rest session). Scroll to the first workout rest duration using the ARROW buttons.

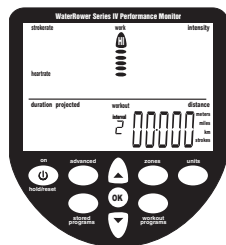


- Once the first workout rest duration is reached, press OK (the distance digits will appear along with the distance and distance unit flags; the workout, interval and work flags will be flashing and the zone bar will be scrolling up to hi. The number 2 will appear in the program window denominating the second work session).

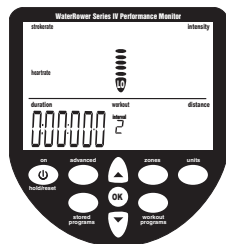


- Once the desired workout distance is reached press OK (the duration digits will appear along with the duration flag, the workout, interval and rest flags will be flashing and the zone bar will be scrolling down to lo. The number 2 will appear in the program window denominating the second rest session).
- Continue on until the desired total number of work pieces is reached. Press OK twice to end the sequence. The S4 monitor's AutoPreview feature will automatically scroll through the distance interval workout settings.


DURATION INTERVAL WORKOUT SETTING

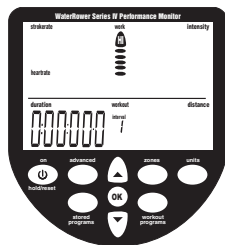


- Scroll to the duration interval workout window using the WORKOUT PROGRAMS button (the duration digits will appear along with the duration flag, the workout, interval and work flags will be flashing and the zone bar will be scrolling up to hi. The number 1 will appear in the program window denominating the first work session). Scroll to the first workout duration using the ARROW buttons.

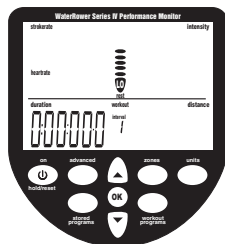

- Once the desired first workout duration is reached, press OK (the duration digits will appear along with the duration flag, the workout, interval and rest flags will be flashing and the zone bar will be scrolling down to lo. The number 1 will appear in the program window denominating the first rest session). Scroll to the first workout rest duration using the ARROW buttons.

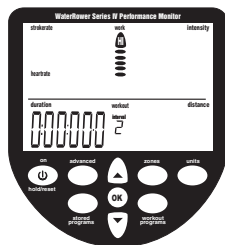


- Once the first workout rest duration is reached, press OK (the duration digits will appear along with the duration flag, the workout, interval and work flags will be flashing and the zone bar will be scrolling up to hi. The number 2 will appear in the program window denominating the second work session).

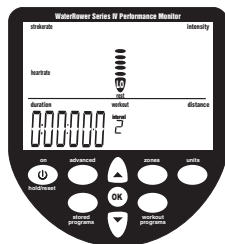


- Once the desired workout duration is reached, press OK (the duration digits will appear along with the duration flag, the workout, interval and rest flags will be flashing and the zone bar will be scrolling down to lo. The number 2 will appear in the program window denominating the second rest session).
- Continue on until the desired total number of work pieces is reached. Press OK twice to end the sequence. The S4 monitor's AutoPreview feature will automatically scroll through the distance interval workout settings.

STORED PROGRAMS

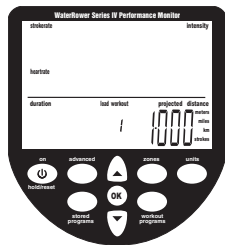

The WaterRower S4 monitor includes an AutoStore function which automatically stores the last 9 historic workout program settings. Programs may be viewed (and selected) using the S4 monitor's AutoPreview function.


RETRIEVING AUTOSTORE PROGRAMS

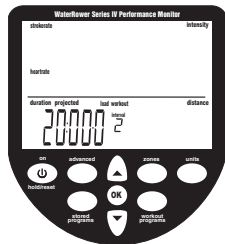

- Scroll through your historic workout settings using the STORED PROGRAMS button. The historic sequence of workouts (1 thru 9) will appear in the program window.
- The S4 monitor's AutoPreview feature will automatically scroll through the workout settings. When the workout you desire is highlighted, press OK to select.

ADVANCED SETTINGS


The WaterRower S4 Monitor has many advanced functions which are accessible using the ADVANCED PROGRAMS button.

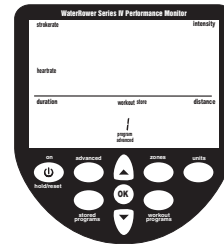

ADVANCED PROGRAM 1 – Store Workouts Settings

In addition to the AutoStore function described earlier, the WaterRower S4 monitor allows manual storage of workout settings. This is particularly useful if the S4 is used by numerous users and the AutoStore programs are overwritten.


- Scroll through your advanced programs options using the ADVANCED button. When Advance Program 1 is highlighted, press OK.
- Scroll to the desired workout storage location (1 thru 9) using the Scroll keys. Press OK when the desired storage location is reached.
- Your workout settings are stored in the selected location and may be retrieved using Advanced Function 2 (see below).

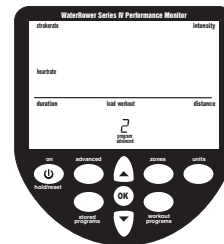

ADVANCED PROGRAM 2 – Retrieve Workout Settings

In addition to the AutoStore function previously described, the WaterRower S4 monitor allows manual storage of workout settings.


- Scroll through your advanced programs options using the ADVANCED button. When Advance Program 2 is highlighted, press OK.
- Scroll to the desired workout storage location (1 thru 9) using the Scroll keys. Each workout setting storage location will scroll through the workout settings to assist selection. Press OK when the storage location is reached.
- Your workout settings stored in the selected location will be loaded.

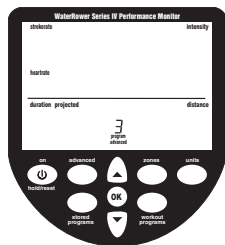

ADVANCED PROGRAM 3 – Projected Duration

The WaterRower S4 monitor allows you to view your projected duration during a distance workout. Projected duration is the duration projected for the set distance given the current intensity. Projected duration must be selected immediately prior to the workout and is current only for that workout.


- Scroll through your advanced programs options using the ADVANCED button. When Advance Program 3 is highlighted, press OK. The projected duration option is selected.
- NOTE: Projected duration is displayed in lieu of duration for 2 seconds in every 10 seconds.

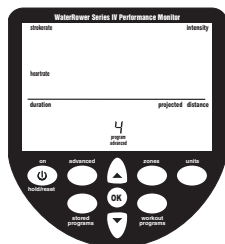

ADVANCED PROGRAM 4 – Projected Distance

The WaterRower S4 monitor allows you to view your projected distance during a duration workout. Projected distance is the distance projected for the set duration given the current intensity. Projected distance must be selected immediately prior to the workout and is current only for that workout.

- Scroll through your advanced programs options using the ADVANCED button. When Advance Program 4 is highlighted, press OK. The projected distance option is selected.
- NOTE: Projected distance is displayed in lieu of duration for 2 seconds in every 10 seconds.

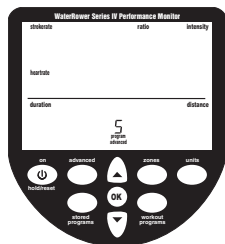

ADVANCED PROGRAM 5 – Ratio


The WaterRower S4 monitor allows you to view the ratio between the power and recovery parts of the stroke. The recovery ratio must be selected immediately prior to the workout and is current only for that workout.

- Scroll through your advanced programs options using the ADVANCED button. When Advance Program 5 is highlighted, press OK. The recovery : power ratio option is selected.
- NOTE: Projected distance is displayed in lieu of duration for 2 seconds in every 10 seconds.


ADVANCED PROGRAM 6 – Advanced Heartrate Analysis

The WaterRower S4 monitor allows advanced heart rate workout analysis. The option is available only during Heartrate Zone Workouts and must be used following the workout. Scroll through your advanced programs options using the ADVANCED button. When Advance Program 6 is highlighted, press OK.


Heartrate statistics will display:

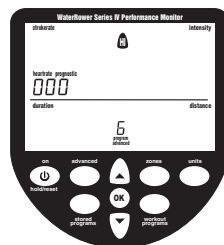


- a.) Maximum (peak) heart rate - the maximum heartrate achieved

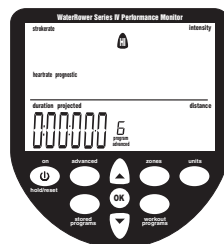


- b.) Time spent above the desired heartrate zone - the time spent above the heartrate zone hi setting

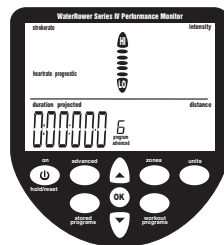

- c.) Time spent in the desired heartrate zone - the time spent between the heartrate zone hi setting and the heartrate zone lo setting

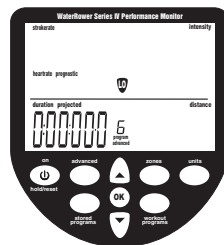


- d.) Time spent below the desired heartrate zone - the time spent below the heartrate lo setting

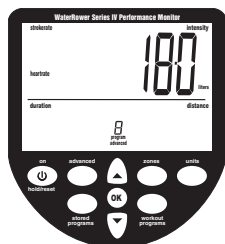

The WaterRower S4 monitor allows you to view your prognostics (the % of a defined 2km time). The option is available only during 2km workouts.

- ## ADVANCED PROGRAM 8 – Tank Volume

- Scroll through your advanced programs options using the **ADVANCED** button. When Advance Program 8 is highlighted, press **OK**.
- Enter the tank volume in the intensity window using the **SCROLL** button. Press **OK** when the desired tank volume is reached.



- Scroll through your advanced programs options using the **ADVANCED** button. When Advance Program 9 is highlighted, press **OK**. The total lifetime distance (in kilometers) and Firmware Version will be displayed.

NOTES

[illegible]

WARRANTY

PRIVATE AND COMMERCIAL USE - WaterRower will replace or repair at its factory or nominated service facility any WaterRower or WaterRower component found to be defective in material or workmanship for a period of **ONE (1) YEAR** from the date of initial shipment by WaterRower. The warranty is upgradeable to **THREE (3) YEARS** on all components and **FIVE (5) YEARS** on all wooden elements by registering your WaterRower within the first year of purchase.

This warranty will be invalid if, in the opinion of WaterRower, the claim has been caused by: (a) accident, abuse, misuse, misapplication or as a result of any modification other than by WaterRower, (b) deterioration due to normal wear and tear, (c) improper preventative maintenance steps as described in the WaterRower Owner's Manual.

The warranty will be voided if, in the opinion of WaterRower, the claim is found to be a result of: (a) improper assembly of the product, (b) usage beyond the design of the product, (c) overfilling of the tank as advised in the Assembly Manuals, (d) use of alternative purification option in tank beyond approved WaterRower product, (e) use of improper cleaning materials as described in the preventative maintenance steps, (f) use and/or storage of product in inclement weather, including but not limited, to extreme temperatures and moisture.

This warranty is not transferable. WaterRower (US) Inc. shall not be liable for any direct, consequential, incidental indirect or special damages under this warranty, or any implied warranty.

Return of the WaterRower or WaterRower component to WaterRower's factory or nominated service centre will be the responsibility of the claimant. The WaterRower or component should be packed to protect it from damage; WaterRower will not be responsible for any damage which may occur during shipment. Postage should be prepaid and the package should contain the claimant's name, address and telephone number, a description of the problem and proof of purchase.

WaterRower will return the WaterRower or WaterRower component to the claimant at its (WaterRower's) expense except in the case where the warranty has been deemed void or invalid. In the event that the warranty is found to have been void or invalid, then the costs of such investigation, repair and any associated shipping costs shall be borne by the claimant.

WaterRower will ground/economy ship all replacement warranty parts. Charges will apply for all alternative shipping methods. Product shipped outside of its initial purchase country may be subject to additional warranty cost and shipping charges.

WaterRower warrants against any defective WaterRower spare part received from WaterRower or any authorized dealer for a period of **NINETY (90) DAYS** after the date of shipment.

The warranty described above shall be in lieu of any other warranty, express or implied, including but not limited to, any implied warranty of merchantability or fitness for a particular purpose. The term of this warranty does not affect or prejudice the statutory rights of a consumer, neither does it limit or exclude any liability for death or personal injury caused by WaterRower's negligence.

Additional information on parts, assembly, preventative maintenance and manuals, as referred to within this warranty document, can be found at www.waterrower.com/warranty.

Please consult your local WaterRower office or local distributor for specific warranty details.

Make note of the serial number. This number can be found on the back of the S4 monitor and is required when contacting WaterRower for customer support.

S/N^o: _____

If you have any questions or comments about the assembly or use of this unit, please contact support@waterrower.com or the phone numbers on the back of this booklet.



UNITED STATES | www.waterrower.com

560 Metacom Avenue | Warren, RI 02885

Tel: +1 (401) 247 7742 | info@waterrower.com

UNITED KINGDOM | www.waterrower.co.uk

19 Acton Park Estate | The Vale, London W3 7QE

Tel: +44 (0)20 8749 9090 | info@waterrower.co.uk

AUSTRALIA | www.waterrower.com.au

Unit 8/46-50 Wellington Rd. | South Granville, NSW 2142

Tel: +61 (0) 2 9681 4221 | info@waterrower.com.au